


FLOODANGEL®
Anti-flood Airbrick

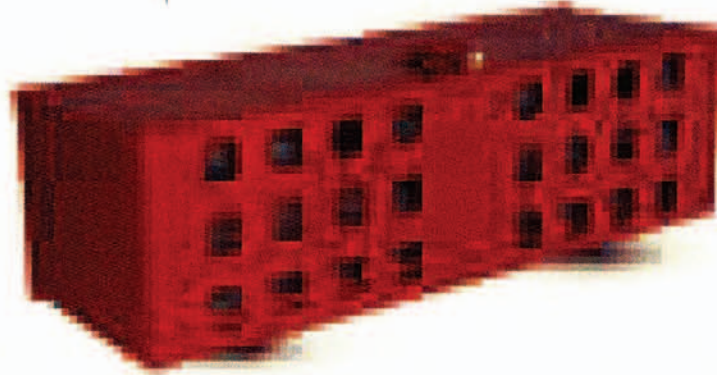

A simple maintenance check is recommended when flood waters have receded to ensure no silt has entered the airbrick:

1. Remove the screw front face (Part A) with a suitable screwdriver. Insert a slotted screwdriver into one of the square holes on the front face and gently pull the face out taking care not to damage or dislodge the insect mesh. If there is any sign of silt inside the Flood Angel® Anti-Flood Airbrick, wash this out gently with cool soapy water
2. Move the flood gate up and down to ensure nothing has obstructed the mechanism, making sure the flood gate has not been dislodged from the holding lugs
3. If it has, clip the gate gently back into the holding lugs
4. The grey silicone pads must face upwards so that the gate rests at a 45 degree angle
5. Secure the screw front face with a suitable screwdriver.