

User guide

- Clean door with soft cloth or sponge using soapy water, avoid using abrasive cleaners or solvents / bleach based products.
- Lubricate all moving parts of the locking mechanism every twelve months, see figure A. Compression on all roller cams is set at installation, for adjustment see figure A. Ensure gaskets are undamaged and free from debris.
- Check roller keeps on door frame for damage, ensure retention screws are firmly in position. Open door and lift handle and check for even movement of roller cams.
- Any failures of locking mechanism or damaged gasket contact provider.
- To lock the door :-
Close door to engage latch, lift handle upwards fully and turn key to lock.
- To unlock the door :-
Turn key to unlock, push handle downwards fully to disengage locking points.
- Providers helpline to be submitted by installer.

Lubrication and adjustment points

Figure 'A'

